LUBRETEC PRODUCTINFORMATIE

OLIEMONSTERNAME-POMP

VACUÜMPOMPEN, KITS





Beschrijving:

Kunststof monsternamepomp voor het eenvoudig nemen van oliemonsters met slang en monsterfles.

Ideaal voor monstername uit opvangbekkens, reservoirs en tanks wanneer geen monsternamekraan beschikbaar of gemonteerd is. Zeer hoog vacuüm, zelfs voor oliën/vloeistoffen met hoge viscositeit.

Wordt standaard geleverd met 22 mm flesaansluiting. Adapters verkrijgbaar voor andere flesafmetingen. Ook verkrijgbaar in kit: Monsterpomp, aanzuigslang 13 meter, 50 ml monsterflesjes met dop. Ook verkrijgbaar pompklem standaard., buizensnijder, koffers, verschillende flesjes etc.


DESCRIPTION	CODE
Sampling Pump 22 mm	OA-PE1022
Sampling Pump 28 mm	OA-PE1028
Sampling Pump 32 mm	OA-PE1032
Sampling Pump 38 mm	OA-PE1038
Sampling Hose 13 m - 40 ft	OA-PE1102
Sampling Kit : Pump 22, Hose, 10 m	OA-PE1022K1
Sampling Kit : Pump Hose, 100 Bottles	OA-PE1022K2
Pump Adapter (for Sampling Pump 22 mm to 15 mm)	OA-PE102215
Pump Adapter (for Sampling Pump 22 mm to 28 mm)	OA-PE102228
Pump Adapter (for Sampling Pump 22 mm to 32 mm)	OA-PE102232
Pump Adapter (for Sampling Pump 22 mm to 38 mm)	OA-PE102238
Pump Adapter (for Sampling Pump 22 mm to 50 mm)	OA-PE102250

Gebruiksaanwijzing


By following the instructions carefully your sampling job will be quick and safe without risk of spill or overfilling, and you don't have to clean the pump between jobs. If you place or hang up the pump while it is filling, make sure it is at a higher level than the surface of the fluid you sample, otherwise it will start a siphon and overflow.




Cut a suitable length of tubing

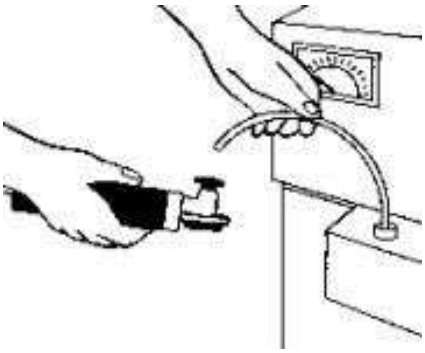


Put the tube into the fluid you want to sample.

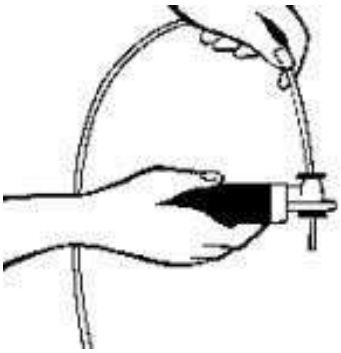


Put the other end through the pump head so that you can just about see it on the other side.

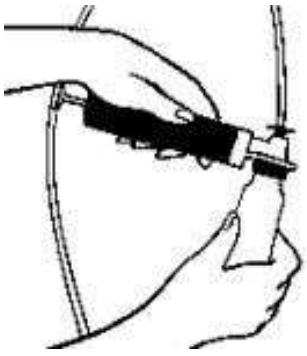

Mount a bottle on the pump.

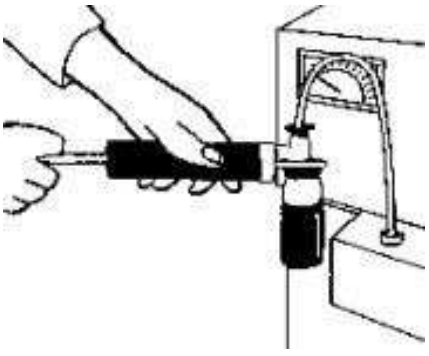

Pump two or three very fast strokes and push the piston in. The bottle will now fill. Make sure the bottle is vertical. You don`t have to stand and wait, stand or hang the pump up.

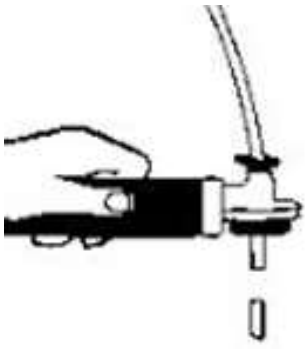

In order not to pollute the next sample, cut or sweep of the tube before you pull it out of the pump. The pump is now ready for the next job.

Lubretec bv - Delften 23 Hall 15B 2390 Malle Belgium - Tel: +323 312 24 73 -
E-mail: info@lubretec.com - VAT: BE0835602540 - Website: www.lubretec.com